


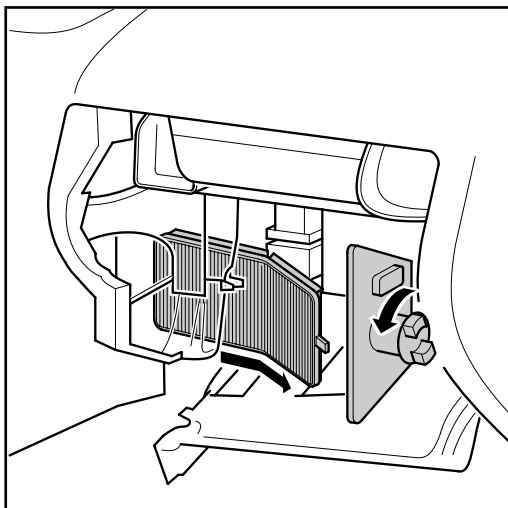

5.

---



- Ⓛ Wechselintervall alle 15.000km oder nach einem Jahr
- Ⓜ Replacement interval 15.000km/10.000miles or after 12 months
- Ⓝ Sostituzione dopo 15.000km o dopo un anno
- Ⓟ Intervalle de remplacement 15.000km ou une fois par an
- Ⓠ Intervalo de cambio 15.000km o después de 1 año
- Ⓡ Bytesintervall 15.000km eller senast inom 1 år



- Ⓛ Weitere Montage erfolgt in umgekehrter Reihenfolge
- Ⓜ Assembly is the reverse order of operation
- Ⓝ Per il montaggio eseguire le operazioni in senso inverso
- Ⓟ Le remontage s'effectue dans l'ordre inverse
- Ⓠ Para concluir la instalación, seguir el orden inverso
- Ⓡ Ytterligare ihopmontering sker i omvänd ordningsföljd